

REPAIR PARTS MANUAL MODEL NO. AB12591A Lawn Tractor



HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:


- Product "Lawn Tractor"
- Model Number "AB12591A"
- Part Number
- Part Description

TABLE OF CONTENTS

SCHEMATIC	3
ELECTRICAL	4-5
CHASSIS AND ENCLOSURES	6-7
DRIVE	8-9
SEAT	10
DECALS	11
STEERING WHEEL	12-13
ENGINE	14
MOWER LIFT	15
MOWER DECK	16-17
WARRANTY	18


TRACTOR - - MODEL NUMBER AB12591A

SCHEMATIC

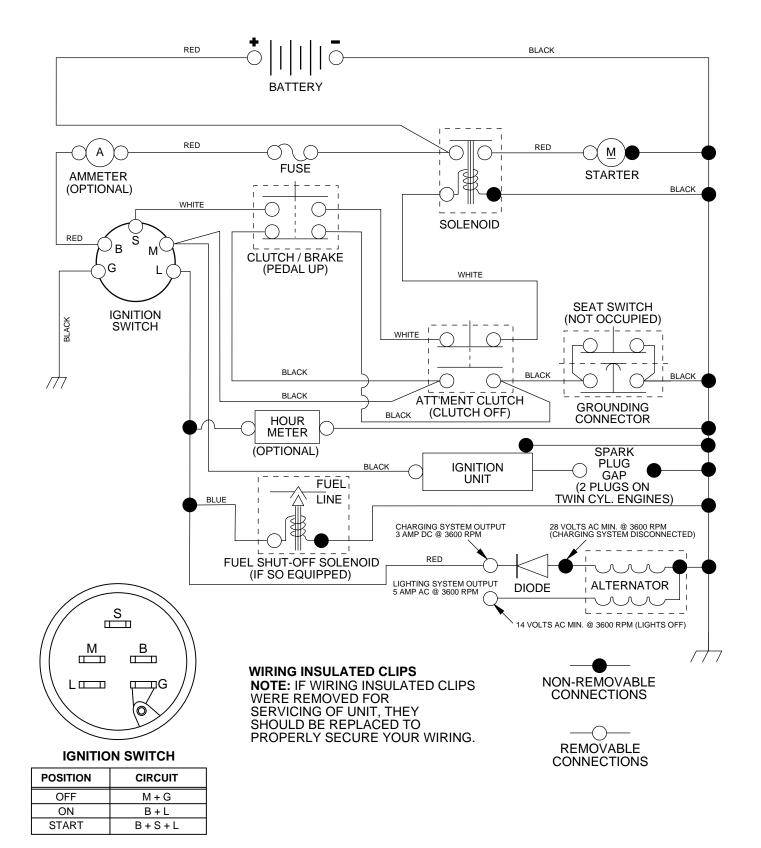

TRACTOR - - MODEL NUMBER AB12591A

ELECTRICAL

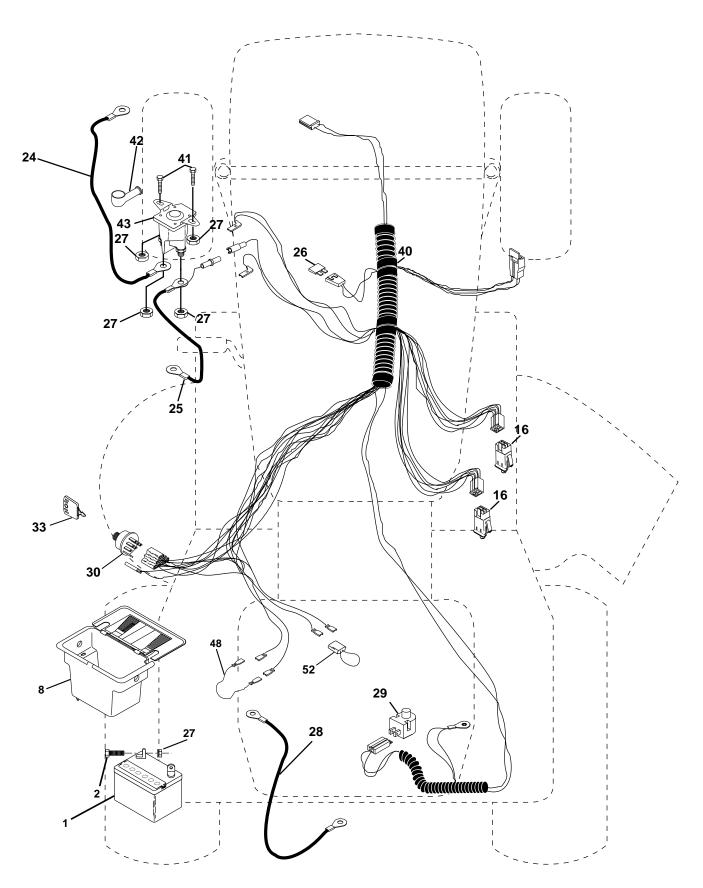

TRACTOR - - MODEL NUMBER AB12591A


ELECTRICAL

KEY NO.	PART No.	DESCRIPTION
		2200mm 11011
1	144925	Battery 12 Volt 25 AMP
2	74760412	Bolt Hex Hd 1/4-20unc X 3/4
8	156417	Case Battery
16	153664	Switch Interlock Push-In
24	4799J	Cable Starter 6 Ga 11 Red
25	146147	Cable Battery 6 Ga 44" red
26	175158	Fuse 20 AMP
27	73510400	Nut Keps Hex 1/4-20 Unc
28	4207J	Cable Ground 6 Ga 12" black
29	121305X	Switch Plunger Nc Gray
30	175567	Switch Ign
33	140401	Key Ign
40	175171	Harness Ignition
41	71110408	Bolt Blk Fin Hex 1/4 - 20 x 1/2
42	131563	Cover Terminal Red
43	175141	Solenoid
48	140844	Adapter Ammeter
52	141940	Protection Wire Loop

NOTE: All component dimensions give in U.S. inches 1 inch = 25.4 mm.

TRACTOR - - MODEL NUMBER AB12591A

CHASSIS AND ENCLOSURES

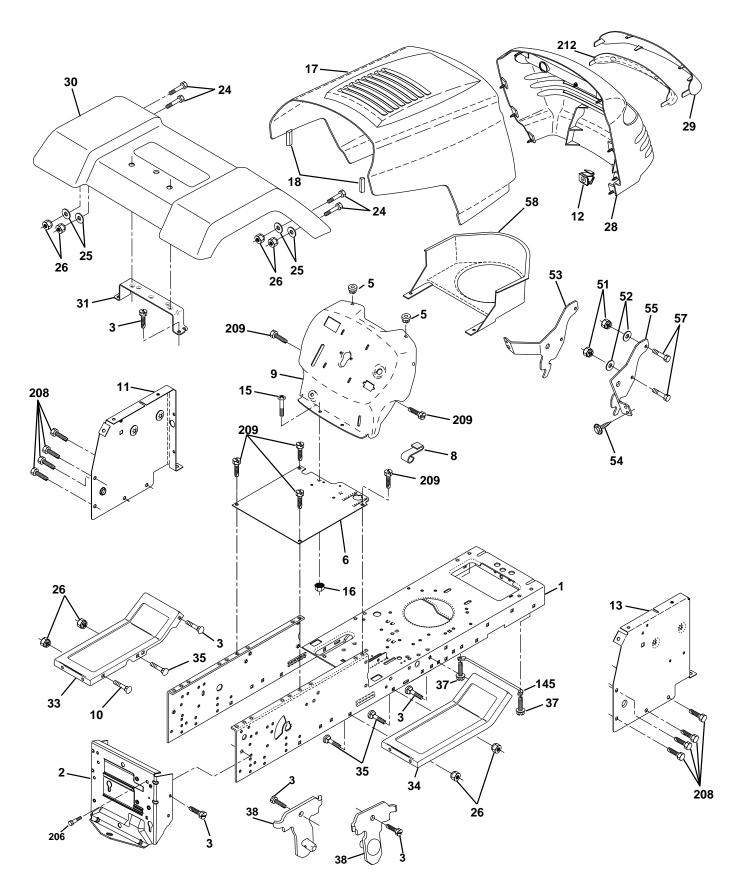

TRACTOR - - MODEL NUMBER AB12591A


CHASSIS AND ENCLOSURES

KEY NO.	PART NO.	DESCRIPTION
1	169831	Chassis
2 3	169061	Drawbar
3	17060612	Screw, 3/8-16 x 3/4 SMGML Tap/R
5	155272	Bumper Hood/Dash
6	155924X011	Saddle Flat
8	155138	Clip Retainer Slide-On
9	168347X011	Dash P/L
10 11	72140608 155927	Bolt, Rdhd Sqnk 3/8-16 x 1 Panel Asm.Dash LH
12	145660	Clip Tinnerman Grille P/L
13	172107X011	Dash, Panel RH
15	74180512	Screw Mach. Trhd 5/16-18 UNC x 3/4
16	73510500	Nut Keps 5/16-18 UNC
17	159639X505	Hood Pnt Stl PL
18	126938X	Bumper Hood
24	74780616	Bolt, Hex , Fin. 3/8-16UNC x 1 Gr. 5
25	19131312	Washer 13/32 x 13/16 x12 Gauge
26	73800600	Nut Lock Hex w/Ins. 3/8-16 Unc
28	176352	Grille
29 30	150209X599	Lens Grille
30 31	169465X505 136619	Fender Pnt Bracket Fender
33	105476X505	Footrest Pnt., LH
34	105475X505	Footrest Pnt., RH
35	72110606	Bolt Rdhd Sht. Sqnk 3/8-16 X 3/4
37	17490508	Screw Thdrol 5/16-18 x 1/2 Tyt
38	169834	Bracket Asm Pivot Mower Rear
51	73800400	Nut Lock Hex W/Ins 1/4-20
52	19091416	Washer 9/32 x 7/8 x 16 Ga.
53	144697	Bracket, Grille LH
54	161464	Screw Hex WSHD 8-18 x 7/8
55	144696	Bracket Grille RH
57 50	74780412	Bolt Fin Hex 1/4-20 x 3/4
58 145	150127 156524	Duct Air Engine PL/LT Rod Pivot Chassis/Hood
206	170165	Bolt Shoulder 5/16-18
208	17670608	Screw Thdrol 3/8-16 x 1/2
209	17070000	Screw Hex Wsh Thdrol 3/8-16 x 3/4
212	156494	Insert Lens Reflect Quarda
	5479J	Plug Btn Blk .359 Dia Ch/Inf

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER AB12591A

DRIVE

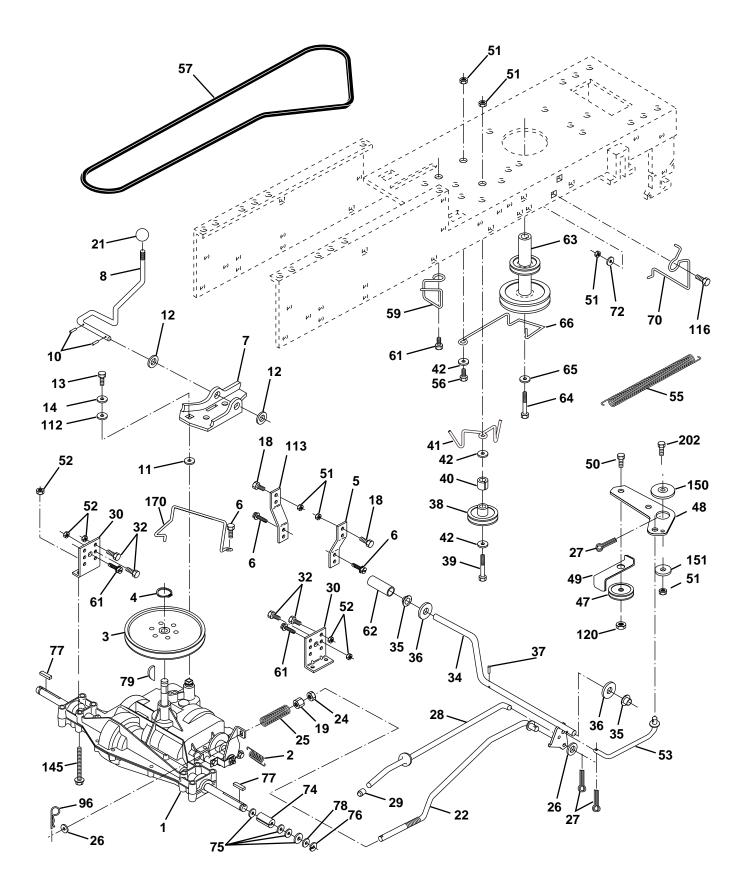


TRACTOR - - MODEL NUMBER AB12591A

DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1		Transaxle (See Breakdown)	47	127783	Pulley, Idler
		Peerless, Model 205-544C	48	154407	Bellcrank Asm Clutch
		Order parts from transaxle	49	123205X	Retainer, Belt
		manufacturer	50	74760624	Bolt, Hex 3/8-16 x 1-1/2
2	146682	Spring, Brake Return	51	73680600	Nut, Crownlock 3/8-16
3	123666X	Pulley, Transaxle	52	73680500	Nut, Crownlock 5/16-18
4	12000028	Ring, Retainer	53	105710X	Link, Clutch
5	121520X	Strap, Torque	55	105709X	Spring, Return, Clutch
6	17060512	Screw, 5/16-18 x 3/4 SMGML	56	74760620	Bolt, Fin, Hex 3/8-16unc x 1-1/2
7	162240	Bracket, T/A, Saddle Shift	57	130801	V-Belt, Drive
8	131679	Rod, Shifter	59	169691	Keeper Belt Center Span
10	76020416	Pin, Cotter 1/8 x 1	61	17060612	Screw, 3/8-16 x 3/4 SMGML
11	105701X	Washer, Shift Plate	62	8883R	Cover, Foot Pedal
12	19151216	Washer 15/32 x 3/4 x 16	63	140186	Pulley, Engine
13	74550412	Bolt 1/4-28 UNF Gr. 8 w/Patch	64	71170764	Bolt, Hex 7/16-20 x 4 Gr. 5
14	10040400	WasherLock	65	10040700	Washer, Lock Hvy Hlcl Spr 7/16
18	74780616	Bolt, Fin Hex 3/8-16 Unc x 1 Gr. 5	66	154778	Keeper, Belt Engine F-Proof
19	73800600	Locknut 3/8-16	70	134683	Guide Belt Mower Drive RH
21	106933X	Knob_	72	19132012	Washer 13/32 x 1-1/4 x 12 Ga.
22	130804	Rod, Brake	74	137057	Spacer, Split
24	73350600	Nut, Hex Jam 3/8-16	75	121749X	Washer 25/32 x 1-1/4 x 16 Ga.
25	106888X	Spring, Rod, Brake	76	12000001	E-Ring
26	19131316	Washer 13/32 x 13/16 x 16 Gauge	77 70	123583X	Key Square
27	76020412	Pin, Cotter 1/8 x 3/4	78 70	121748X	Washer 25/32 x 1-5/8 x 16 Ga.
28	145204	Rod, Brake, Park	79 00	2228M	Key Woodruff #9 3/16 x 3/4
29	124236X	Cap, Plunger	96	4497H	Retainer Spring 1" Ziinc/Cad
30	174973	Bracket, Transaxle, L.H.	112	19091210	Washer 9/32 x 3/4 x 10 Ga.
32	74760512	Bolt Hex Hd 5/16-18 UNC x 3/4	113	127285X	Strap Torque L.H. Lt
34	155071	Shaft, Foot Pedal	116	72110610	Bolt, RdHd Sq Neck 3/8-16 x 1.25
35	120183X	Bearing Nylon	120	73900600	Nut Lock Flg 3/8-16 Unc
36	19211616	Washer 21/32 x 1 x 16 Gauge	145 150	74490540 165850	Bolt, Hex Flghd 5/16-18 Gr. 5
37	1572H	Pin,Roll 3/16 x 1	150	19133210	Bushing, Bellcrank Grd Dr. Washer 13/32 x 2 x 10 Ga.
38	131494	Idler, Flat		173898	
39	74760644	Bolt, RDHD 3/8-16unc x 2-3/4 Gr. 5	170 202	72110612	Keeper, Belt, Transaxle GD.
40	4470J	Spacer	202	12110012	Bolt Carr Sh 3/8-16 x 1-1/2 Gr. 5
41 42	165838 19131312	Keeper, Belt Washer 13/32 x 13/16 x 12 Gauge		E: All compor h = 25.4 mm.	nent dimensions give in U.S. inches.

TRACTOR - - MODEL NUMBER AB12591A


SEAT

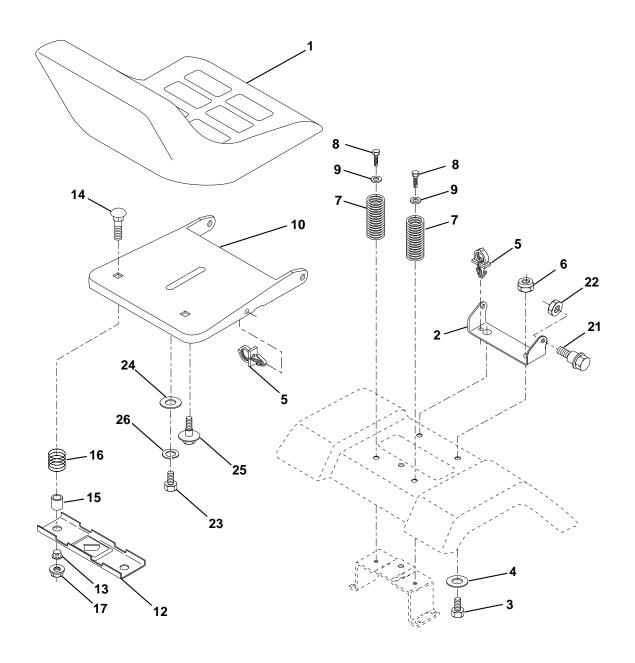

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	127426X	Seat	14	72050412	Nut, Crownlock 1/4-20 x 1-3/8
2	140551	Bracket, Pivot, Seat	15	134300	Spacer, Split
3	71110616	Fin Hex 3/8-16unc x 1	16	121250X	Spring
4	19131610	Washer 13/32 x 1 x 10 Ga.	17	123976X	Nut, Ľock, Flange 1/4 Gr. 5
5	145006	Clip, Push-in	21	171852	Bolt, Shoulder 5/16-18 UNC-2A
6	73800600	Nut	22	73800500	Nut
7	124181X	Spring, Seat	23	71110814	Bolt Hex Black
8	17000616	Screw, 3/8-16 x 1.5 SMGML Tap/R	24	19171912	Washer 17/32 x 1-3/16 x 12 Ga.
9	19131614	Washer 13/32 x 1 x 14 Ga.	25	127018X	Bolt Shoulder 5/16-18 x .62
10	174894	Pan, Seat	26	10040800	Washer Lock Hvy Hclc Spr 1/2
12 13	121246X 121248X	Bracket, Mounting, Switch, Seat Bushing, Nylon		E: All compon	ent dimensions given in U.S. inches


TRACTOR - - MODEL NUMBER AB12591A

DECALS

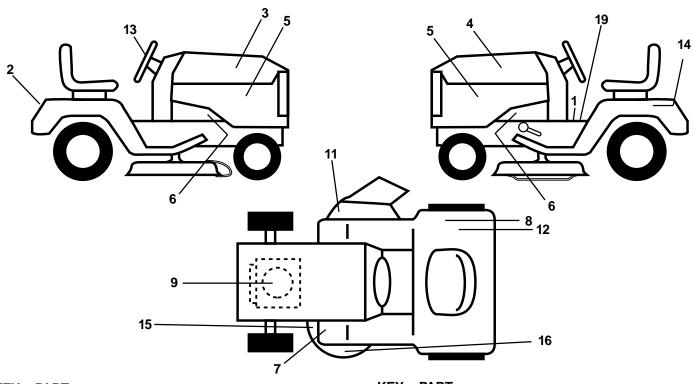

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	145498	Decal, Instruction, Operation	13	175829	Decal, Wheel Steering
2	163520	Decal, Fender	14	145005	Decal, Btry Dngr/Psn P/L Sym
3	167922	Decal, Hood R.H.	15	136832	Decal, V-Belt
4	167923	Decal, Hood. L.H.	16	134999	Decal, Deck
5	159713	Decal, Panel Side	19	140837	Decal, Parking Brake
6	159736	Decal, Chassis Hot Muffler		138311	Decal, Handle, Lift, Height Adjust
7	159737	Decal, Brake/Clutch Symbol LT			(Lift Handle)
8	145437	Decal, Europe Stand ČE		162598	Decal, Drawbar Load Limit
9	170841	Decal, HP Engine		176819	Manual, (Euro) Operator's
11	145494	Decal, Mower Cutfinger Symbol		176820	Manual, Repair Parts
12	126187X	Decal 100 DBA			•

TIRES AND WHEELS

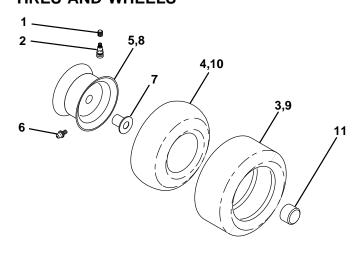


KEY NO.	PART NO.	DESCRIPTION
1	59192	Cap, Valve
2	65139	Stem, Valve
3	124157X	Tire Front
4	59904	Tube, Front (not furnished)
5	106732X427	Rim, Asm. Front
6	278H	Grease Fitting (rear tire only)
7	9040H	Bearing, Flange (front tire only)
8	106108X427	Rim, Asm. Rear
9	123969X	Tire, Rear
10	7152J	Tube, Rear (not furnished)
11	104757X428	Cap, Axle
	144334	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER AB12591A

STEERING WHEEL

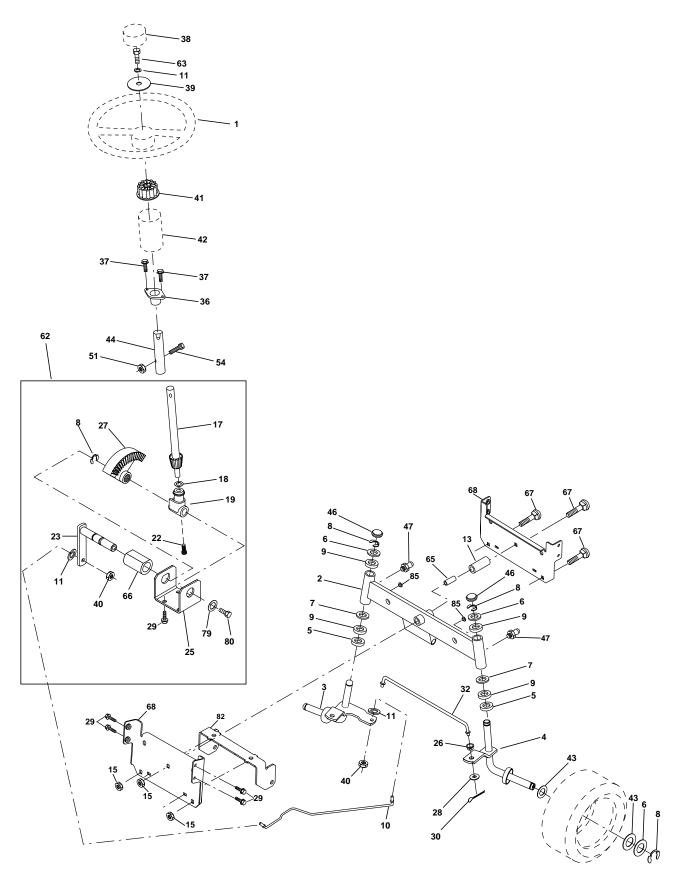

TRACTOR - - MODEL NUMBER AB12591A


STEERING WHEEL

1 140044X428 Wheel Steering 2 154427 Axle Asm Front 3 169840 Spindle Asm LH 4 169839 Spindle Asm RH 5 6266H Bearing, Race, Thrust Hardened 6 121748X Washer 25/32 X 1-5/8 X 16 Ga 7 19272016 Washer 27/32 X 1-1/4 X 16 Ga 8 12000029 Ring Klip 9 3366R Bearing 10 169832 Link Drag 11 10040600 Washer Lock Hvy Hlcl Spr 3/8 13 136518 Spacer Brg. Axle Front 15 145212 Nut Hexflange Lock 17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/3
3 169840 Spindle Asm LH 4 169839 Spindle Asm RH 5 6266H Bearing, Race, Thrust Hardened 6 121748X Washer 25/32 X 1-5/8 X 16 Ga 7 19272016 Washer 27/32 X 1-1/4 X 16 Ga 8 12000029 Ring Klip 9 3366R Bearing 10 169832 Link Drag 11 10040600 Washer Lock Hvy Hlcl Spr 3/8 13 136518 Spacer Brg. Axle Front 15 145212 Nut Hexflange Lock 17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 760204
4 169839 Spindle Asm RH 5 6266H Bearing, Race, Thrust Hardened 6 121748X Washer 25/32 X 1-5/8 X 16 Ga 7 19272016 Washer 27/32 X 1-1/4 X 16 Ga 8 12000029 Ring Klip 9 3366R Bearing 10 169832 Link Drag 11 10040600 Washer Lock Hvy Hlcl Spr 3/8 13 136518 Spacer Brg. Axle Front 15 145212 Nut Hexflange Lock 17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32
5 6266H Bearing, Race, Thrust Hardened 6 121748X Washer 25/32 X 1-5/8 X 16 Ga 7 19272016 Washer 27/32 X 1-1/4 X 16 Ga 8 12000029 Ring Klip 9 3366R Bearing 10 169832 Link Drag 11 10040600 Washer Lock Hvy Hlcl Spr 3/8 13 136518 Spacer Brg. Axle Front 15 145212 Nut Hexflange Lock 17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36
6 121748X Washer 25/32 X 1-5/8 X 16 Ga 7 19272016 Washer 27/32 X 1-1/4 X 16 Ga 8 12000029 Ring Klip 9 3366R Bearing 10 169832 Link Drag 11 10040600 Washer Lock Hvy Hlcl Spr 3/8 13 136518 Spacer Brg. Axle Front 15 145212 Nut Hexflange Lock 17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
7 19272016 Washer 27/32 X 1-1/4 X 16 Ga 8 12000029 Ring Klip 9 3366R Bearing 10 169832 Link Drag 11 10040600 Washer Lock Hvy Hlcl Spr 3/8 13 136518 Spacer Brg. Axle Front 15 145212 Nut Hexflange Lock 17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38
9 3366R Bearing 10 169832 Link Drag 11 10040600 Washer Lock Hvy Hlcl Spr 3/8 13 136518 Spacer Brg. Axle Front 15 145212 Nut Hexflange Lock 17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
10 169832 Link Drag 11 10040600 Washer Lock Hvy Hlcl Spr 3/8 13 136518 Spacer Brg. Axle Front 15 145212 Nut Hexflange Lock 17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
11 10040600 Washer Lock Hvy Hlcl Spr 3/8 13 136518 Spacer Brg. Axle Front 15 145212 Nut Hexflange Lock 17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
13 136518 Spacer Brg. Axle Front 15 145212 Nut Hexflange Lock 17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
15 145212 Nut Hexflange Lock 17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
17 156546 Steering, Assembly Shaft 18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
18 57079 Washer Thrust 515x 750x 033 19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
19 160395 Support Shaft 22 165857 Screw Hex WSHHD Torx 23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
23 165851 Shaft Asm Pittman 25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
25 154406 Bracket Steering 26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
26 126847X Bushing Link Drag Blk Lr 27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
27 136874 Gear Sector 28 19131416 Washer 13/32 x 7/8 x 16 Ga. 29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
28
29 17060612 Screw 3/8-16x3/4 SMGML Tap/R 30 76020412 Pin Cotter 1/8 x 3/4 CAD 32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
32 130465 Rod Connecting 36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
36 155099 Bushing Steering 37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
37 152927 Screw TT #10-32 X 5 x 3/8 Flange 38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
38 140045X428 Cap Wheel Steering 39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
39 19133812 Washer 13/32 x 2-3/8 x 12 Ga
40 7810H Nut Lock Center 3/8-24 Unf
41 100711L Adapter Wheel Strg
42 145054X428 Boot Steering
43 121749X Washer 25/32 X 1 1/4 X 16 Ga
44 153720 Extension Steering
46 121232X Cap Spindle 47 6855M Fitting Grease
51 73800500 Nut Lock Hex W/Ins. 5/16-18 Unc P
54 74780520 Bolt Fin Hex 5/16-18 Unc 6 x 1-1/4
62 167902 Kit Steering Asm. Service
63 74780616 Bolt Fin Hex 3/8-16unc x 1 Gr. 5
65 160367 Spacer Brace Axle
66 154404 Bearing Arm Pittman
67 72140618 Bolt RDHD SQ 3/8-16UNC x 2-1/4 68 169827 Brace Axle
79 19132012 Washer 13/32 x 1-1/4 x 12
80 74950612 Bolt, Hex Nylon 3/8-16 x 3/4
82 169835 Bracket Susp. Chassis Front
85 133835 Fastener Christmas Tree

NOTE: All component dimensions given in U.S. inches 1 inch = 25.4 mm


TRACTOR - - MODEL NUMBER AB12591A

ENGINE

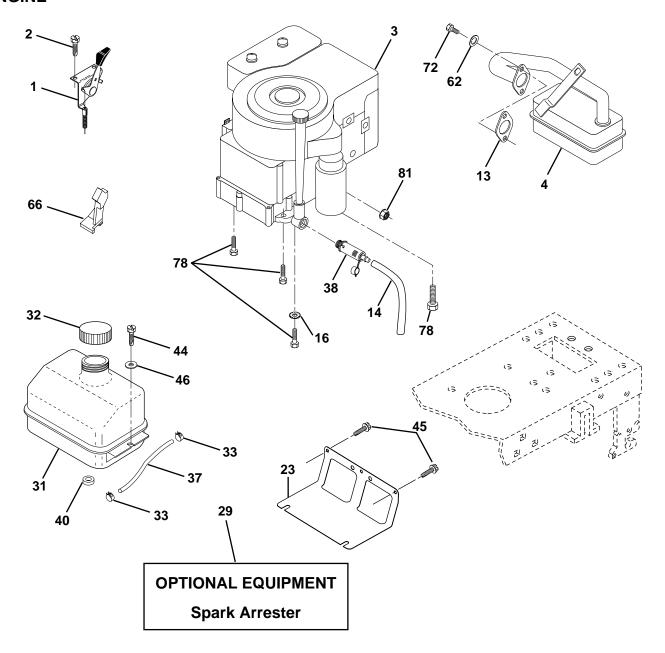

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1 2 3 4 13 14 16 23 29 31 32 33	170865 17720410 137348 165291 148456 11050600 169837 137180 109202X 140527 123487X	Control Th/ch Screw Hex Thd Cut 1/4-20x5/8 T Engine, B&S Model 289707 (Order parts from engine manufacturer) Muffler Exhaust Gasket Muffler Tube Drain Oil Easy Washer Lock Ext Tooth 3/8 Shield BRN/DBR Guard Kit Spark Arrestor (Flat Scrn) Tank Fuel Front Cap Asm Fuel Clamp Hose Blk	37 38 40 44 45 46 62 66 72 78 81 NOTE	137040 148315 124028X 17670412 17000612 19091416 10040500 127951 71070512 17060620 73510400 E: All comport	Line Fuel Plug Easy Oil Drain Bushing Snap Nyl Blk Fuel Line Screw Hexwsh Thdrol 1/4-20x3/4 Screw Hex Wsh Thdrol 3/8-16 Washer 9/32 X 7/8 X 16 Ga Washer 5/16 Stop Throttle 3000 RPM Screw Hex Hd Cap 5/16-18 x 3/4 Screw 3/8-16x1-1/4 SMGML Tap/R Nut Keps Hex 1/4-20 UNC nent dimensions given in U.S. inches.
			4		


TRACTOR - - MODEL NUMBER AB12591A

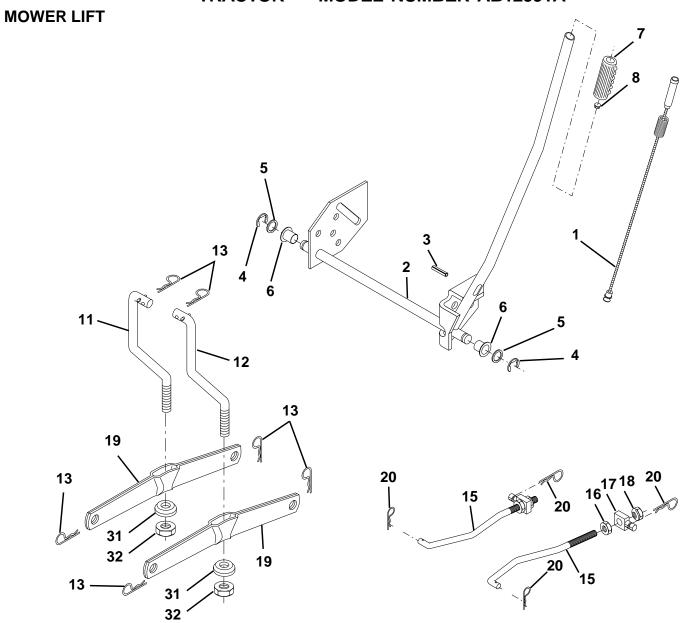

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART No.	DESCRIPTION
1 2 3 4 5 6 7 8 11	159460 159471 105767X 12000002 19211621 120183X 109413X 122365X 139865	Wire Asm. Inner/Sprg w/Plunger Shaft, Asm., Lift R/H Pin, Groove Ring, E #5133-62 Washer 21/32 x 1 x 21 Ga. Bearing, Nylon Grip Handle Bicycle Matte Blk Button, Plunger Link, Lift, Lh	15 16 17 18 19 20 31 32	173288 73350800 130171 73800800 139868 163552 169865 73540600	Link, Front Nut, Jam, Hex 1/2-13 Unc Trunnion Nut Lock W/Wsh 1/2-13 Unc Arm, Suspension, Rear Spring, Retainer Zinc Bearing, Pvt Lft Nut Crownlock 3/8-24
12 13	139866 4939M	Link, Lift, Rh Spring, Retainer		E: All compor	nent dimensions given in U.S. inches

TRACTOR - - MODEL NUMBER AB12591A

MOWER DECK

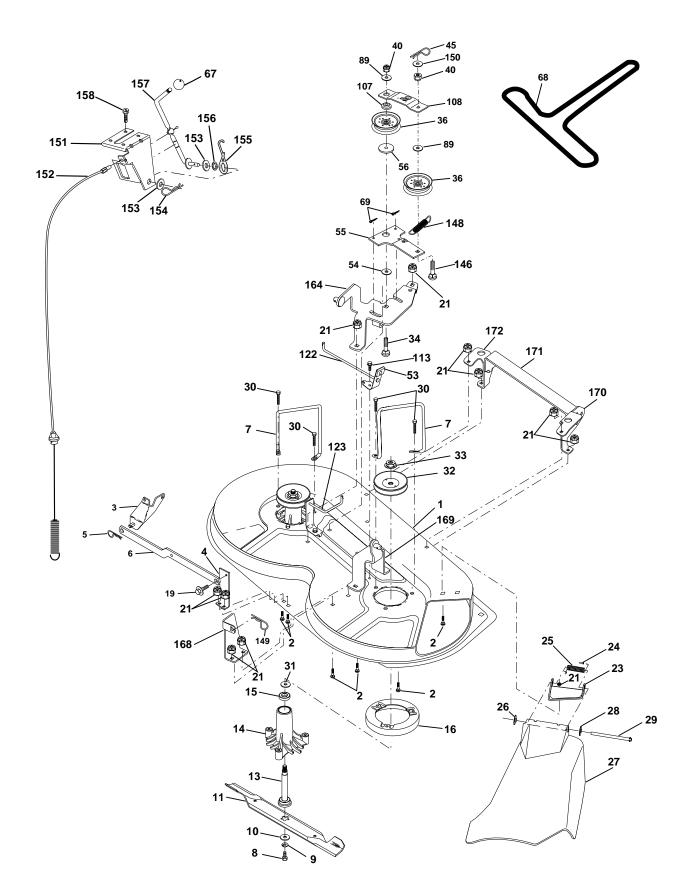

TRACTOR - - MODEL NUMBER AB12591A

MOWER DECK

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	174595	Mower Deck Assembly	54	133943	Washer, Hardened
2	72140506	Bolt	55	133840	Idler Arm Assembly
3	138017	Bracket Assembly, Sway Bar	56	165723	Spacer, Retainer
4	175654	Bracket Sway Bar	67	106932X	Knob RD 3/8-16 Plstc Thd
5	4939M	Retainer Spring	68	174978	Belt
6	130832	Arm, Suspension, Rear	69	76020312	Pin, Cotter 3/32 x 3/4
7	140608	Keeper Belt	89	19131612	Washer 13/32 x 1 x 12 Ga
8	850857	Bolt, Hex 3/8-24 x 1.25 Gr. 8	107	133502	Spacer, Retainer
9	10030600	Washer, Lock Hvy Hlcl 3/8	108	133503	Stiffener, Idler Arm
10	140296	Washer, Hardened	113	17490508	Screw Thdrol 5/16-18 x 1/2
11	138496	Blade, Mower	122	174505	Rod, Brake, LH
13	137645	Shaft Assembly, Mandrel,	123	174504	Rod, Brake, RH
		Vented	146	165891	Bolt Carriage Idler
14	128774	Housing, Mandrel, Vented	148	169022	Spring Return Idler
15	110485X	Bearing, Ball, Mandrel	149	165898	Retainer Spring Yellow Zinc
16	174493	Stripper, Vented Mower Deck	150	19091216	Washer 9/32 x 3/4 x 16 Ga.
19	132827	Bolt, Shoulder	151	169670	Bracket Clutch
21	73680500	Nut Crownlock 5/16-18	152	176079	Cable Clutch
23	136631	Bracket, Mower Deflector	153	169674	Washer Flat 3/8" Type B
24	105304X	Cap, Sleeve	154	169675	Spring Retainer
25	123713X	Spring, Torsion, Deflector	155	169671	Spring Retention Lever
26	110452X	Nut, Push	156	169672	Spacer
27	175029X428	Shield, Deflector	157	169669	Rod Clutch
28	19111016	Washer 11/32 x 5/8 x 16 Ga.	158	17720410	Screw Hex Thd Cut 1/4-20x5/8
29	121980X	Rod, Hinge	164	174976	Bracket Asm Idler Support
30	157722	Screw Thdrol Washer Head	168	172377	Bracket Deck Cable
31	129963	Washer, Spacer	169	174977	Bracket Asm Suspension
32	153531	Pulley, Mandrel	170	172359	Bracket Suspension RF
33	137266	Nut, Toplock, Flanged	171	165237	Brace Support Susp. Frt
34	72110614	Bolt Rdhd 3/8-16 x 1-3/4	172	172355	Bracket Suspension LF
36	131494	Pulley, Idler, Flat		130794	Mandrel Assembly (Includes Key
40 45	73680600	Nut Crownlock 3/8-16			Numbers 12-15, 17-19, 31 and 33)
45 53	4497H	Retainer, Spring		175254	Mower Deck, Complete
53	130840	Brake Assembly		E: All compon n = 25.4 mm	ent dimensions given in U.S. inches

LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of one (1) year from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

- This warranty does not apply to the engine. Please contact your nearest dealer where they will send the machine to the engine manufacturer.
- 2. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by your dealer.
- 3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
- 4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
- 5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
- 6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
- 7. In case of any problem within the boundaries of this warranty, contact the nearest BRICORAMA department store, indicate the model number, serial number and the date of purchase of your machine. This warranty does not apply to accidental damages. All implicit warranties are limited to the same time frames. Or contact:

E.M. Services 54 Rue Lambrechts 92400 Courbevoie France Telephone: (1) 46678078

Fax: (1) 46678095

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES. ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN.



SERVICE POLICY



WARRANTY

Issued January 1980 Revised January 1991

LIMITED WARRANTIES FOR NEW PEERLESS GEAR POWER TRAIN COMPONENTS

A. Products Warranted

Peerless Gear and Machine Division of Tecumseh Products Company ("Tecumseh"), subject to the limitations contained below, will, at its option, repair or replace, without charge for parts or labor only, any part of a new Power Train Component (which as used herein means and includes the transaxle, gear box, transmission, differential and right angle drives, and any part of the Power Train Component), EXCEPT any new Power Train Component incorporated in equipment used for commercial or rental purposes, which is found upon examination by any Tecumseh Authorized Service Outlet or by Tecumseh's factory in Grafton, Wisconsin, to be DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP if received by Tecumseh or a Tecumseh Authorized Service Outlet for such examination within TWO YEARS from the date of sale to the original consumer purchaser of Peerless Series 820, 900, 910, 915, 920, 930 transaxles and Series 1100 angle drive and ONE YEAR for all other Peerless products. New Power Train Components incorporated in equipment used for commercial purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for NINETY (90) DAYS ONLY, and must be received by Tecumseh or by a Tecumseh Authorized Service Outlet for such examination within 90 days from the date of sale to the original purchaser. New Power Train Components Incorporated in equipment used for rental purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for THIRTY (30) DAYS ONLY, and must be received by Tecumseh or a Tecumseh Authorized Service Outlet within 30 days from the date of sale to the original purchaser.

B. Products And Items Not Warranted

- 1. Alterations or Modifications of Power Train Components.
- 2. Accidents, Normal Maintenance, Failure to follow the Original Equipment Manufacturer's Manual.

This warranty covers only parts of new Power Train Components which are found upon examination to be defective in material or workmanship as delivered to the original purchaser. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, failure to follow the instructions contained in an Instruction Manual for the operation of the Power Train Component and parts. The cost of normal maintenance and replacement of service items which are not defective shall be paid for by the original purchaser.

C. Securing Warranty Service

Warranty service can be arranged for by contacting either a Tecumseh Authorized Service Outlet (any Tecumseh Registered Service Dealer, Tecumseh Authorized Service Distributor, or Tecumseh Central Warehouse Distributor) or by contacting Tecumseh, c/o Service Manager, Engine and Transmission Group Service Division, 900 North Street, Grafton, Wisconsin 53024. Warranty service can only be performed by a Tecumseh Authorized Service Outlet or by Tecumseh at its factory in Grafton, Wisconsin. At the time of requesting warranty service, evidence must be presented of the date of sale to the original purchaser. The purchaser shall pay any charges for making service calls and/or for transporting the product to and from the place where the inspection and/or warranty work is performed. The purchaser shall be responsible for any damage or loss incurred in connection with the transportation of Power Train Components and/or part(s) of the Power Train Components submitted for inspection and/or warranty work.

D. Limitation of Damages and Implied Warranties

The foregoing EXPRESSED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. Neither Tecumseh nor any of its affiliates makes any warranties, representations or promises, written or oral, as to the quality of the Power Train Component or any of its parts, other than as set forth herein.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT THAT EITHER MAY APPLY TO ANY PART(S) OF POWER TRAIN COMPONENTS, SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESSED WARRANTIES DEFINED IN PARAGRAPH A HEREOF. IN NO EVENT WILL TECUMSEH BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES AND/OR EXPENSES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

E. No Dealer Warranty

Tecumseh neither assumes nor authorizes any other person, natural or corporate, to assume for Tecumseh any other obligations or liabilities in connection with or with respect to any part(s) of a Power Train Component. The seller or dealer of part(s) of a Power Train Component has no authority, whatsoever, to make any representations or promises on behalf of Tecumseh or to modify the terms or limitations of Tecumseh's warranty in any way.

19